

# **USER MANUAL**

## **FREE MATCH-Duct TYPE**

Please read this manual carefully before installing and using your air conditioner


Please keep this manual in a safe place for future reference.

## Free Match Overview


### Outdoor unit

FMA-14I2HA/DVO


FMA-18I2HA/DVO

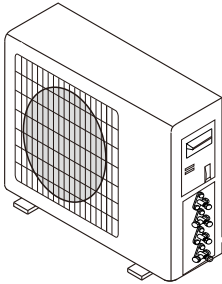

FMA-21I3HA/DVO

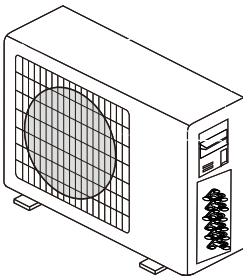


FMA-28I4HA/DVO

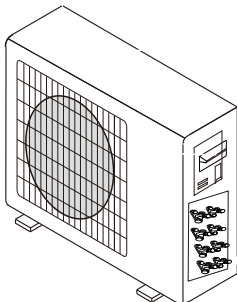


### Indoor unit


Wall mount 7K/9K/12K/18K

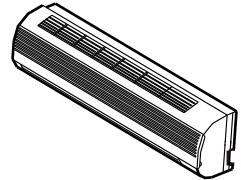

Cassette 9K/12K/18K

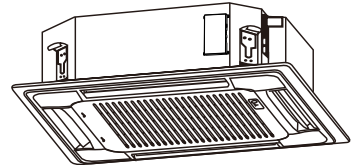

Duct 9K/12K/18K

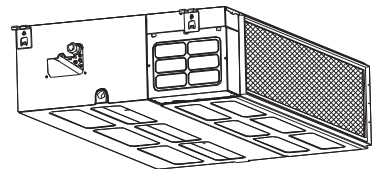

## Match table

Outdoor unit	Standard Match	Max Capacity
FMA-14I2HA/DVO	7K+7K	21K
FMA-18I2HA/DVO	9K+9K	27K
FMA-21I3HA/DVO	7K+7K+7K	32K
FMA-28I4HA/DVO	7K+7K+7K+7K	42K



Outdoor unit	1 unit	2 units	3 units	4 units
FMA-14I2HA/DVO	7K 9K 12K	7K+7K;7K+9K; 7K+12K;9K+9K; 9K+12K	NA	NA
FMA-18I2HA/DVO	7K 9K 12K	7K+7K;7K+9K; 7K+12K;7K+18K 9K+9K;9K+12K; 9K+18K;12K+12K	NA	NA
FMA-21I3HA/DVO	7K 9K 12K 18K	7K+7K;7K+9K; 7K+12K;7K+18K 9K+9K;9K+12K; 9K+18K;12K+12K; 12K+18K	7K+7K+7K;7K+7K+9K; 7K+7K+12K;7K+7K+18K; 7K+9K+9K;7K+9K+12K; 9K+9K+9K;9K+9K+12K;	NA
FMA-28I4HA/DVO	7K 9K 12K 18K	7K+7K;7K+9K; 7K+12K;7K+18K 9K+9K;9K+12K; 9K+18K;12K+12K; 12K+18K;18K+18K	7K+7K+7K;7K+7K+9K; 7K+7K+12K;7K+7K+18K; 7K+9K+9K;7K+9K+12K; 7K+9K+18K;9K+9K+9K; 9K+9K+12K;9K+9K+18K; 9K+12K+18K;12K+12K+18K;	7K+7K+7K+7K; 7K+7K+7K+9K; 7K+7K+7K+12K; 7K+7K+7K+18K; 7K+7K+9K+12K; 7K+7K+9K+18K; 7K+9K+9K+12K; 7K+9K+9K+18K; 9K+9K+9K+9K; 9K+9K+9K+12K; 9K+9K+9K+18K

# CONTENTS

[illegible]


## PRECAUTION

- Read the following " PRECAUTIONS" carefully before installation.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below.  
Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

 <b>WARNING</b>	This indication shows the possibility of causing death or serious injury.
 <b>CAUTION</b>	This indication shows the possibility of causing injury or damage to properties only.

### NOTE :

1. Injury means causing harmed, burned, electrical shocked, but not serious for hospitalization.
  2. Damage of property means disrepair of property, material.
- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

 <b>WARNING</b>
<ul style="list-style-type: none"> <li>● Engage dealer or specialist for installation. If installation done by user is defective, it will cause water leakage, electrical shock or fire.</li> </ul>
<ul style="list-style-type: none"> <li>● Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.</li> </ul>
<ul style="list-style-type: none"> <li>● Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.</li> </ul>
<ul style="list-style-type: none"> <li>● Install at a strong and firm location which is able to withstand the set's weight. If the strength is not enough or installation is not properly done, the set will drop and cause injury.</li> </ul>
<ul style="list-style-type: none"> <li>● For electrical work, follow the local national wiring standard, regulation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in electrical work, it will cause electrical shock or fire.</li> </ul>
<ul style="list-style-type: none"> <li>● When carrying out piping connection, take care not to let air or other substances other than the specified refrigerant go into refrigeration cycle. Otherwise, it will cause lower capacity, abnormal high pressure in the refrigeration cycle, explosion and injury.</li> </ul>
<ul style="list-style-type: none"> <li>● Grounding is necessary. It may cause electrical shock if grounding is not perfect.</li> </ul>
<ul style="list-style-type: none"> <li>● Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.</li> </ul>

### Operating condition

The protective device maybe trip and stop the unit within temp range listed below:

HEATING	Outdoor air temperature is over 30℃
	Outdoor air temperature is below -15℃
	Room temperature is over 31℃
COOLING	Outdoor air temperature is below -15℃
	Outdoor air temperature is over 50℃
	Room temperature is below 17℃
DRY	Room temperature is below 18℃

If the air conditioner runs for a long time in "COOLING" or "DRY" mode at air relative humidity higher than 80% (doors or windows opened), dew may generate and drip near air outlet.

### Noise pollution


- Install the air conditioner in a place that can bear its weight in order to operate more quietly.
- Install the outdoor unit in a place where the air discharged and the operation noise do not annoy your neighbors.
- Do not place any obstacles in front of the outlet of the outdoor unit for fear it affects operation and increases the noise level.

### Features of Protector

- 1 The protective device will trip at following cases.
  - Stop the appliance and restart it at once or change other modes during operation, you have to wait 3 minutes before restarting.
  - After switching on the power circuit breaker and then turn on the air conditioner at once, you have to wait about 20 seconds.
- 2 In case all operations have stopped, you need Press "ON/OFF" button again to restart it. Set TIMER once again if it has been canceled.

### Inspection

After a long time of operation, the air conditioner should be inspected for the following items.

- Abnormal heating of the power supply cord and plug or even a burnt smell.
  - Abnormal operating noise or vibration.
  - Water leakage from indoor unit.
  - Metal cabinet electrified .
-  Stop using the air conditioner if above problem happened.  
It is advisable that the air conditioner should be given a detail check-up after using for five years even if none of the above happen.

### Feature of HEATING mode


#### Preheat

2-5 minutes are necessary to preheat the indoor heat exchanger at the beginning of "HEATING" operation, lest cold air be discharged.

#### Defrost

In "HEATING" operation the appliance will defrost automatically. This procedure lasts 2~10 minutes, then returns to "HEATING" mode automatically. During defrosting, indoor fan stop running and return to heating mode operation automatically when defrosting has finished.

## PARTS AND FUNCTIONS

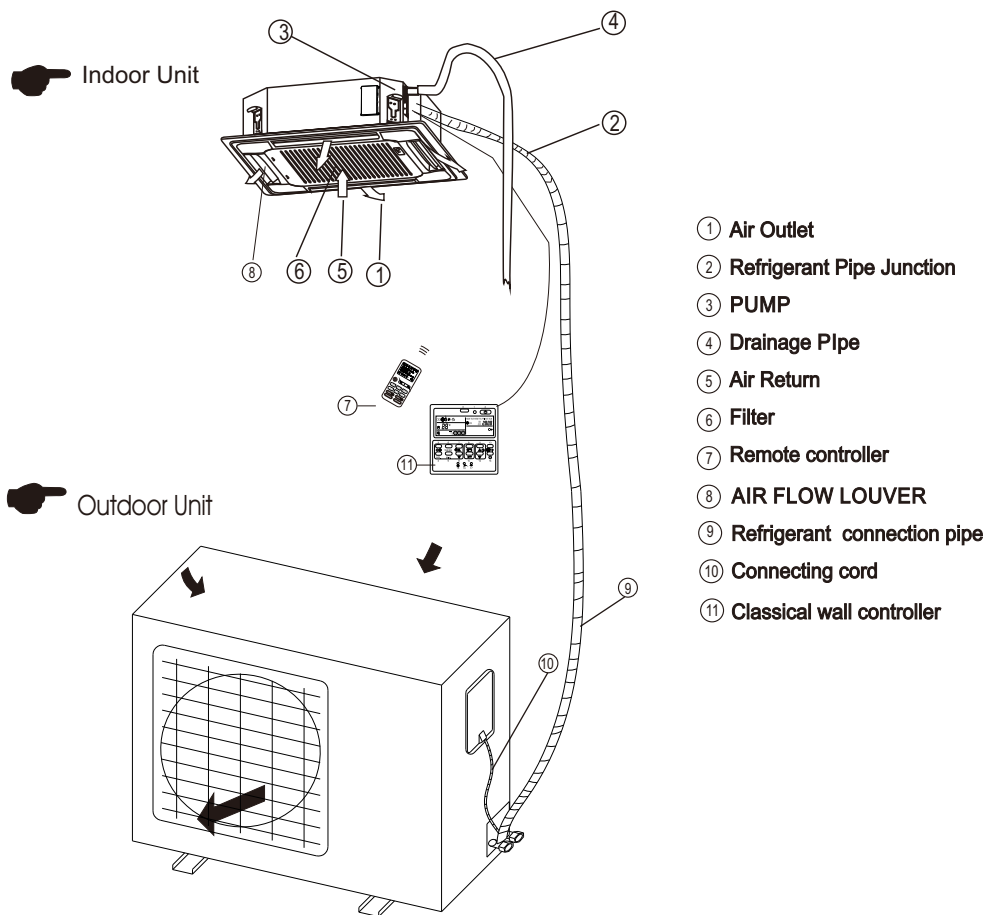

### Requirements

- The air conditioner cannot be started up until it is powered on for 2 hours. Furthermore, in case of a shutdown lasting for about one day only, please do not cut off the electricity supply. (it is necessary to heat the crankcase heater so as to avoid force start of compressor. )
- Notice that the air inlet/outlet must not be choked up. If chokeup takes place, the air conditioner behavior may be affected, or air conditioner cannot run because of actuation of protector.

# INDOOR UNIT INSTALLATION

## Pre-installation precautions

● Please confirm that the installation personnel are qualified in relevant installation service. If the air conditioner was installed by persons without special skills, normal operations would not be ensured, even the personal and estate safety would be affected

The air conditioner must be correctly installed by installation technicians according to the attached 『Installation Manual』, and the user himself should not install it.

## User guideline

- The user's installation site should be provided with regular power supply in conformity with that indicated in nameplate of the air conditioner, and its voltage should be within a range 90 %~ 110 % of the rated voltage value.
- Power circuit should be equipped with protector, such as electricity leakage protector or air switch, which should possess a capacity greater than 1.5 times the maximum current value of the air conditioner.
- Never fail to adopt personal circuit and effectively-grounded socket compatible with the attached plug of the air conditioner. The attached plug is equipped with grounding pin, and it must not be modified as desired.
- Please adopt the fuse or circuit breaker prescribed in Installation Instructions.
- Only qualified electrician is allowed to carry out wiring tasks strictly according to electric safety requirements.
- Do ensure good earth of air conditioner, in other words, the main power switch of air conditioner must be connected to reliable ground wire


## Precautions

- The air conditioner should be installed securely; otherwise poor installation may lead to abnormal noises and vibration.
- Outdoor unit should be installed at a spot ensuring that its air outlet noises and hot exhaust will not violate your neighbors.


## Choice of air return ways

This indoor unit is fitted with downward air return, which can be change to its backward counterpart if necessary. Please follow the steps below(2-5) to change it into the mode of air return backward(6).

### 1. Air return downward

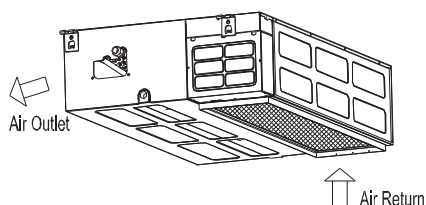



### 2. Loose the nut and dismantle flannel plate and filter; Loose the nut dismantel the back over.

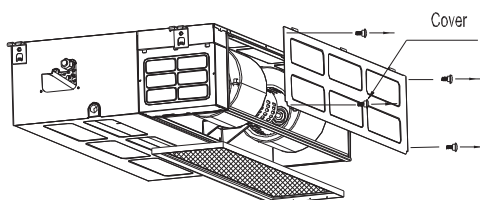




3. Install the flannel plate and filter at the backside; Install the cover to the downside.

4. Air return backward.

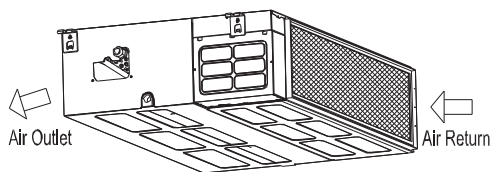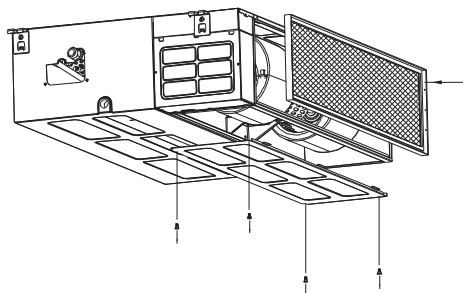


### Installation Space

Ensure sufficient space for installation and repair.

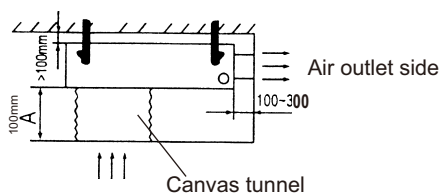


### Wooden construction

Put the square timber over the roof beam, then install the hanging screw bolt.

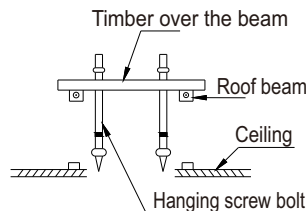


### New concrete bricks

Inlaying or embedding the screw bolts

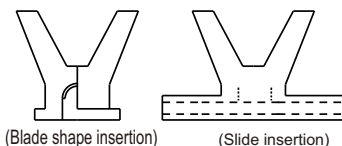

### Finished concrete bricks

Install the hanging hook with expansible bolt into the concrete deep to 45-50mm to prevent loose.

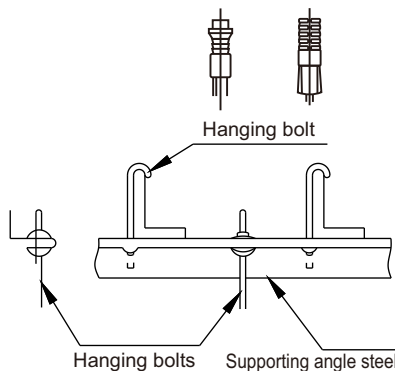


### Steel roof beam structure

Make use of steel in the ceiling or supporting angle steel..

## Hanging & Installation of Indoor Unit


Adjust the nut position while the gap between gasket(downside) and ceiling should be confirmed according to actual situations.

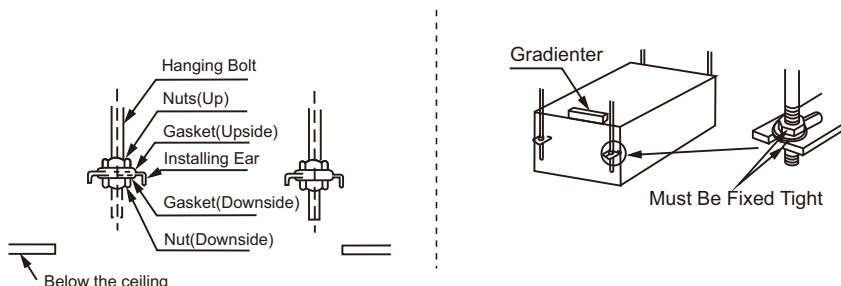

Hang the nut inside the U slot of the installation panel. To confirm level degree with gradienter .  
( Leaning downside toward non-draining side is prohibited)


## 2. How to mount outlet pipe

- Generally, we have two types of outlet pipe available, i.e. rectangular or round ones.
- Rectangular air conduit can be directly connected to air outlet of indoor unit by rivets. For outlet dimensions, see outline drawing of the unit.
- Round air conduit should be connected to a piece of transitional air conduit before it is connected to air outlet of indoor unit, the other end of it can be separately connected to air conduit window or connected to air conduit window after air flow diversion, and the total length should not be over 6m. As shown in figure below, air speeds at all air outlets should be set to basically consistent so as to meet the room air-conditioning requirements.

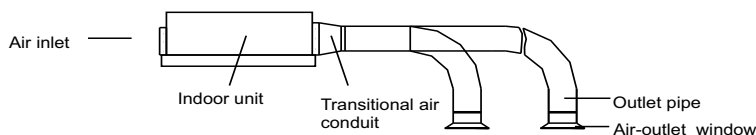

## 3. Installation method for return air pipe

- In case sidewise air intake is adopted, return air pipe should be fabricated and rivet-connected to return air orifice, and the other end of it should be connected to return air window.
- In case of underside air intake, purchase or fabricate a section of pleated canvas air conduit serving as transition joint for return air orifice and return air window. In this way, it can be freely adjusted according to height of indoor ceiling board; in addition, during operation of the unit, canvas air conduit may avoid vibration of ceiling board, as shown in figure below.

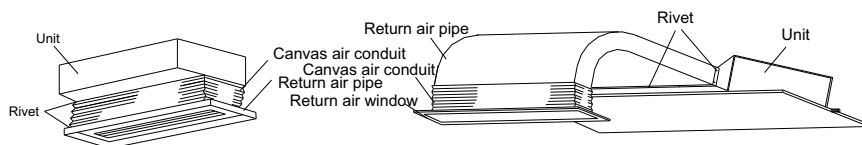

Installation mode for underside air intake

Installation mode for sidewise air intake

## Drainage Pipe Material, Heat-insulating Material

The listed material should be used:

Drainage Pipe Material	Polyvinyl chloride pipe ( $\phi 32$ mm outer diameter)
Heat Insulation Material	Foamed polyethylene insulation plate (10mm thickness)


### Connection Procedure

Connect the transparent pipe with the polyvinyl chloride pipe.

- Use polyvinyl chloride glue at the connection part of the drainage pipe, be sure no water leakage.
- Paste glue at the front 40mm of the polyvinyl chloride pipe, insert it into the transparent pipe.
- It needs 10 minutes for the glue to dry. Do not impose pressure on the connection during the drying period.

### Heat Insulation

Wrap the flexible hose carefully with the attached heat insulation material from the start to the end (to indoor part)

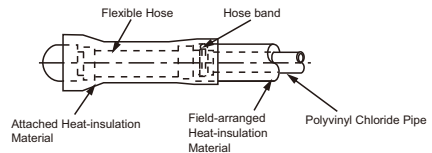


## High static pressure drainage pipe installation

Warning:




Must install drainpipes according to the following figure, avoiding generating condensed water and leakage water.

- Assemble the main body according to Figure.
- The opening of drainpipes can be installed on the left side or the right side. Could remove the drain stopper and put it on the left side or the right side.
- For the best effect, should keep pipes as short as possible. Tilt the pipes to ensure the flow of fluid.
- Make sure the drainpipes have admirable heat insulation.
- It is necessary to install a trap near the opening of the drainpipe, so that when the machine is working, the pressure in the inside of the machine is lower than atmospheric pressure. If there isn't an elbow, the water will splash and the pipe will produce a bad smell.
- Keep straightness of drainpipes so as to remove dirt.
- Seal the drainpipe on the other side of the machine, then wrap up the drainpipe in the heat-barrier materials.
- Put water into the drain pan to test whether the water can be discharged swimmingly.
- In humid conditions, please must use an add-on drain pan (commercially available) to cover the whole area of the indoor unit.

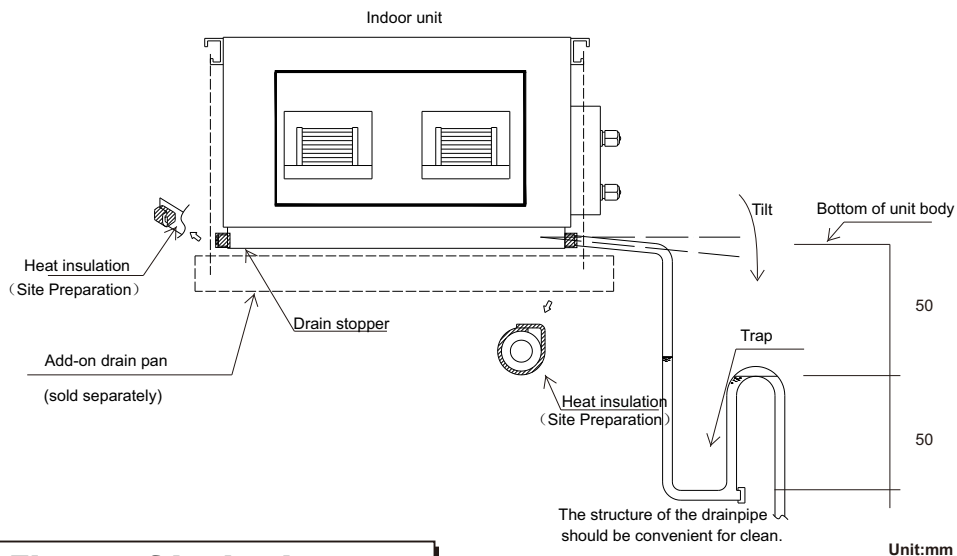


## Figure of body size

  1.The positioning of ceiling hole, indoor unit and hanging screw bolts.

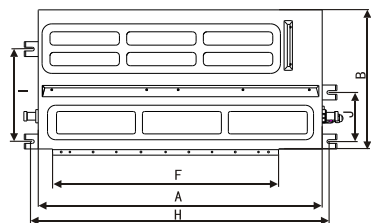

	Outline dimension			Air return opening size		Air outlet opening size		Size of mounted lug		
	A	B	C	D	E	F	G	H	I	J
7/9/12K	700	447	200	570	172	510	140	738	298	158
18K	920	447	200	790	172	730	140	958	298	158

Split type outdoor unit

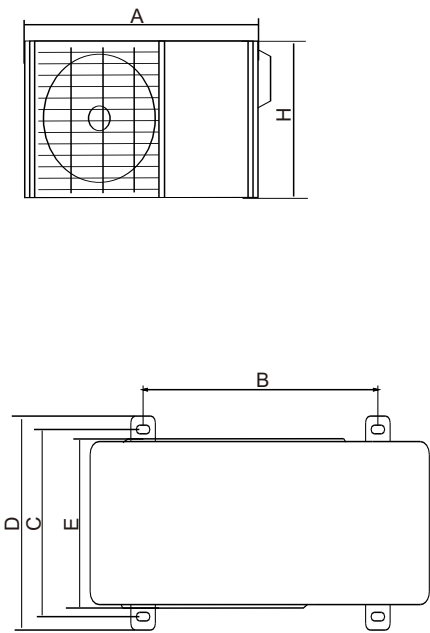

MODE	A	B	C	D	E	H
14K/18K	780	515	328	360	290	605
21K	900	753	349	359	315	650
28K	940	600	375	400	340	885

## Choose installation location

### ◇ INDOOR UNITS

- 1、A place where there are sufficient space for repair
- 2、Hung ceiling that can bear the weight of the machine.
- 3、A place without air inlet and outlet is not hindered and without influence from outdoor air
- 4、A place without heat source like smoke, fire or toxic pollution.
- 5、A place where air flow can be transmitted everywhere in the room.
- 6、A place convenient for installation.

### ◇ OUTDOOR UNITS

- 1.A place where there is sufficient space for installation and repair.
- 2.A place where the air inlet and outlet are not hindered , without strong air flowing.
- 3.A dry and ventilated place.
- 4.A place where the overhanging is leveland bear the weight of the outdoor unit, without much noise.
- 5.A place where neighbours are not annoyed by noise and exhausted air.
- 6.A place without leakage of flammable gas.
- 7.A place convenient for installation.


Caution:(location in the following places may cause malfunction of the machine).

- 1.A place where there is flammable gas leakage.
- 2.there is salty air surrounding( near the coast)
- 3.there is caustic gas( the sulfide, for example) existing in the ai.
- 4.a place where can not bear the weight of the machine
- 5.in kitchen where it is full of oil gas.
- 6.there is strong electromagnetic wave existing.
- 7.there is acid or alkaline liquid evaporating
- 8.a place where air circulation is not enough.
- 9.other special surroundings.

# OUTDOOR UNIT INSTALLATION



## Move outdoor unit in

1. Please use 4 pieces of 6mm steel wire hanging the outdoor unit up and move in.
2. To avoid the outdoor unit is out of shape, please add the baffles at the surface of outdoor unit where the steel wire rope may touch.
3. after moving, please remove the tray wood on the bottom.

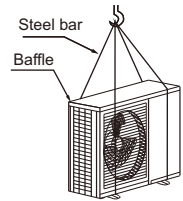


## INSTALLATION SPACE

 
1. After leaving repair space as illustrated below, install the outdoor unit with power supply equipment installed at the side of the outdoor unit. Please refer to ELECTRIC SUPPLY INSTALLATION MANUAL for the installation method.
2. Please make sure necessary space for installation and repair.

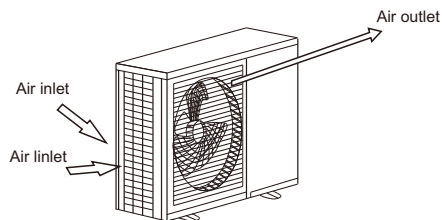

Air outlet of the outdoor unit  
Overview of the outdoor unit

 No obstruction from the air outlet of outdoor unit

- At least 600mm space must be left between outdoor units as the sketch indicated.

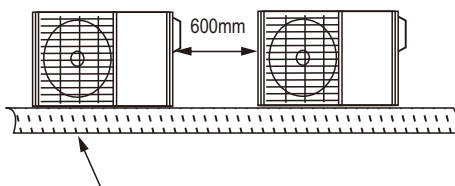

# REFRIGERANT PIPE INSTALLATION

## Pipe dimension and ways of installation


Outdoor pipe dimension and ways of install (in sequence of cooling capacity)

Pipe Material		Copper Pipe for Air Conditioner	
Model		9K/12K	18K
Size(mm)	Liquid side	$\phi 6.35(1/4\text{inch})$	$\phi 6.35(1/4\text{inch})$
	Gas side	$\phi 9.52(3/8\text{inch})$	$\phi 12.7(1/2\text{inch})$

Conventional pipe, cooling capacity 14000~30000Btu/h		Allowed value
Longest pipe(L)		15m
Maximum height drop	Height drop between indoor and outdoor unit	10m

Please refer to refrigerant pipe connection for detail.

Allowed length and height drop

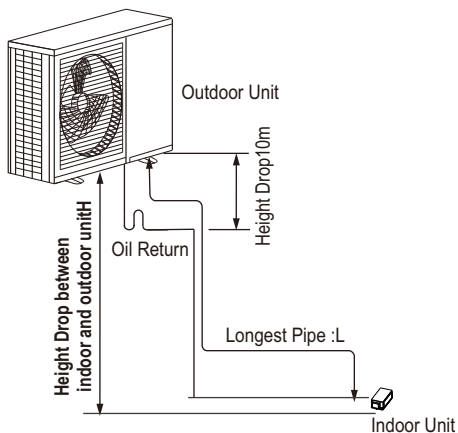

Remove objects and water

- Use high-pressure nitrogen to clean the pipe instead of outdoor refrigerant.
- Before installing refrigerant pipe, please clean the pipe in case of foreign objects.

Additional refrigerant charge


The additional charge is base on the diameter and length of outlet/inlet liquid type .  
This AC has been charged with that for 5m pipe, those beyond 5 m should recharge as follows.

Model	9K	12K	18K
Standard charge pipe	5m	5m	5m
Additional charge	15g/m	15g/m	20g/m




## FIARING

- ① Cut the refrigerant pipe off with pipe cutter.

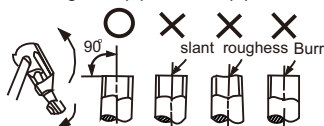

 - ② Flaring after putting the pipe into connection nut.



Outside Diameter	A (mm)	
	MAX	MIN
$\phi 1/4$	8.7	8.3
$\phi 3/8$	12.4	12.0
$\phi 1/2$	15.8	15.4

### Stop valve operation item

- Open the valve rod til to the position rod.  
Do not try to open larger.
  - Fasten the bonnet with spanner or similar tools.
  - Fasten the bonnet of valve rod.
- Liquid side( $\phi 3/8"$  ,  $\phi 1/2"$  ) : 1180Ncm(120kgfcm)  
gas side( $\phi 5/8"$  ,  $\phi 3/4"$  ) : 1180Ncm(120kgfcm)

- When vacuum pump is used, each low-pressure valve must be manipulated as follow  
Please refer to operation manual for the usage of manifold valve.

1. Connect the recharged hose to lower pressure valve junction ( low/high pressure valve must be tightened.)
  2. Connect the charged hose junction with vacuum pump.
  3. Open the low pressure handler of manifold fully.
  4. Start vacuumizing with vacuum pump. When vacuumizing begins, loosen the nut of low pressure valve a bit. Check if the air enters (noise of vacuum pump changes, the all-purpose meter indication change from negative to zero), then tighten the nut of connection pipe.
  5. After vacuumizing finishing, tighten the low pressure handler of manifold valve fully and stop the vacuum pump.
- When vacuumizing is carried out for over 15 minutes, please confirm if the all-purpose meter points at  $-1.0 \times 10^5$  Pa ( $-76\text{cmHg}$ )
6. Open the high/low pressure valve fully.
  7. Dismantle the recharged hose from charge gap of low pressure valve.
  8. Tighten the bonnet of low-pressure valve.



 
## Junction fixture

- Aim at connection pipe  
fix the nut of connection pipe, then tighten]  
as the following diagram with spanner


### Notice

- According to installation conditions, overlarge wrenched torch will destroy the nut. (Unit. N.cm)

Outside diameter	Stengthen to fasten the torch
$\phi 1/4$	1420~1720N cm (144~176kgf.cm)
$\phi 3/8$	3270~3990N cm (333~407kgf.cm)
$\phi 1/2$	4950~6030N cm (504~616kgf.cm)
$\phi 5/8$	6180~7540N cm (630~770kgf.cm)
$\phi 3/4$	9720~11860N cm (990~1210kgf.cm)

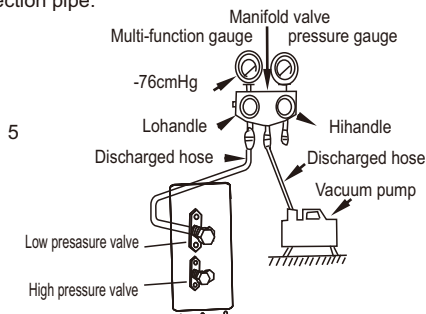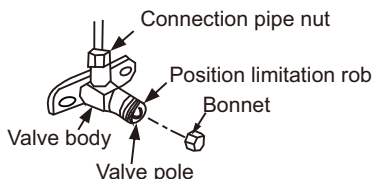

- The following figure only shows the assembly relationship of the indoor unit ,outdoor unit and refrigerant pipes.
- Please refer to the following figures to install.

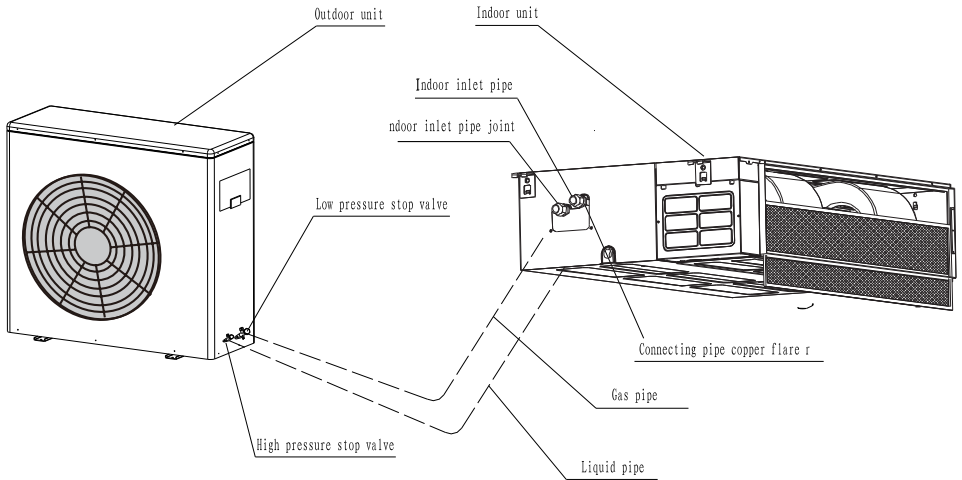

#### NOTE

- The throttle subassembly **has** been installed in the outdoor unit..
- Use two spanners to connect the pipe with indoor/outdoor pipes to avoid the copper pipe cracking.
- Please pay attention to the connection orientation when connecting.

## AIR PURGING

Use a vacuum pump, to vacuum from the gas side refrigerant adding mouth of the outdoor unit.

**Air and moisture remains inside the refrigeration system, may has the following bad effects:**

- Rise of pressure inside the refrigeration system;
  - Decrease of cooling (or \*heating) effect;
  - Moisture frozen and blocking the refrigeration system;
  - Rusting of certain parts of the system
- Don't use the refrigerant of the outdoor unit to do the vacuum. (A certain volume of refrigerant had been added into the outdoor unit in factory.)

**After connecting the indoor and outdoor units , it is necessary to exhaust the air inside the pipes completely as follows:**

## ELECTRIC WIRING



### WARNING

**Specified power cables should be used. Do not apply any pressure on the terminals used to connect.**

Improper connection may cause fire.



**Grounding must be properly done.**

The grounding wire should be away from gas pipes, water pipes, telephone, lightning rods or other grounding wires. Improper grounding may cause electric shock.



**Electric Wiring must be done by professionals. Use a separate circuit according to national regulations.**

The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.

If the wiring capacity is not enough, electric shock or fire may occur.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard

An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.



### CAUTION

Be sure to install Current Leakage Protection Switch. Or electric shock may occur.  
The appliance must be positioned so that the plug is accessible.  
The appliance shall be installed in accordance with national wiring regulations.

### CAUTION

- Power cord is to be selected according to national regulations.
- Outdoor unit power cord should be selected and connected according to the outdoor unit installation manual.
- Wiring should be away from high temperature components, or the insulation layer of the wires may melt down.
- Use wire clamp to fix the wires and terminal block after connection.
- Control wire should be wrapped together with heat insulated refrigerant pipes.
- Connect the indoor unit to power only after the refrigerant has been vacuumed.
- Don't connect the power wire to the signal wire connection end.

## ■ Panel Wiring

Connect the Swing Motor terminal block according to cassette indoor unit wiring diagram.

## ■ Terminal Board Diagram

Please refer to cassette indoor unit wiring for the wiring.

## ■ Steps of external wiring connection

1. Remove air intake grille and electric box cover of indoor unit.


Remove access door of outdoor unit.

Connect the power supply connecting cable, the control connecting cable and defrost connecting cable between indoor and outdoor unit. (The defrost connecting cable is not applicable for heat pump models. ) Please refer to the following pages for details.

Make sure the cables being fixed well with an effective anchorage after connecting.

Grounding work must be carried out for indoor and outdoor units.

Install the components removed back to the unit.

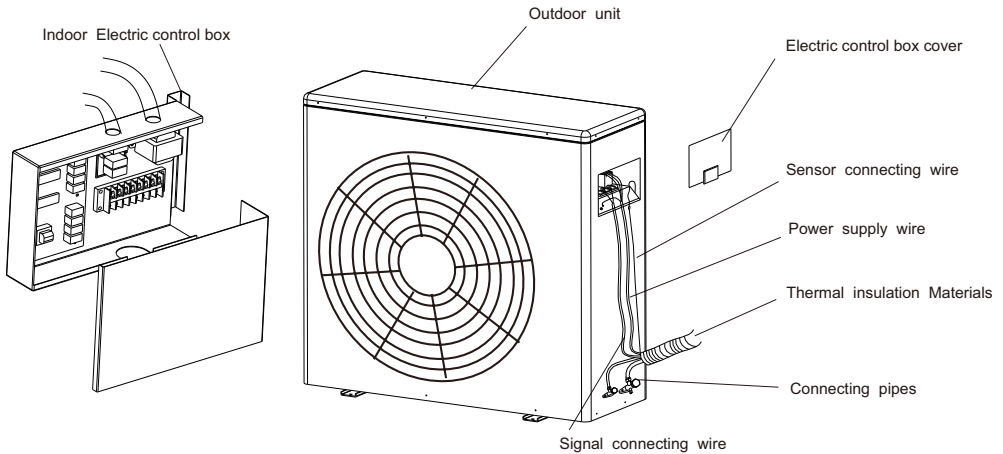


## 2. Binding treatment

Once the connecting wires have been properly connected, bind the connecting tubing, connecting wire and drain pipe by binding tapes

After binding treatment, the cross section is shown in the figure below:

Notice: Drain pipe must not be flattened during binding treatment.




Drain pipe outlet should be led to a place that can avoid affecting the environment.

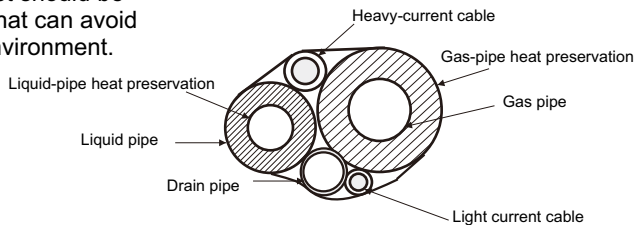

If situations as follow occur, please cut off the electric power before contacting the dealer

- open or close incorrectly ● fuse or electric leakage protector breaks for several times.
- Objects or water into the AC

### 3. External wiring diagrams

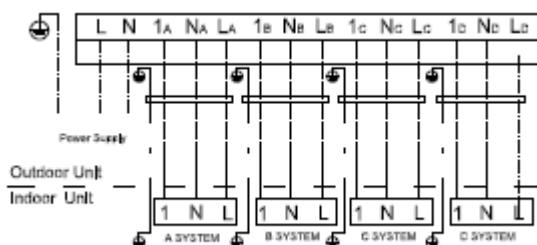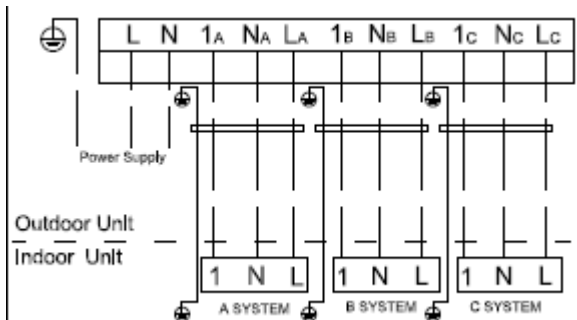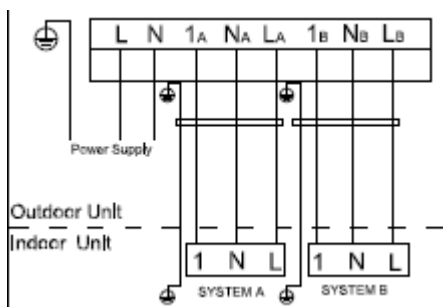

## TEST RUN

### Before testing

- Check if piping, drainage and external wiring have been finished correctly.
- Check if the power supply complies with requirements; if there is refrigerant leakage; if the all wires and cables are correctly connected and well fixed.

### Function test

- After checking, energize your appliance and press the buttons on the control panel to see if the buttons function;
- If LCD screen displays normally.

### Notes



- Please read this operating and installation instructions carefully.
- Do not let air in or refrigerant out during installing or reinstalling the appliance.
- Test run the air conditioner after finishing installation and keep the record .
- Type of fuse for controller of indoor unit is 50T, rated specification is T 10 A, 270V. Fuse for the whole unit is not supplied by the manufacturer, so the installer must employ a suitable fuse or other over-current protective device for the power supply circuit according to the maximum power input as required.
- The air conditioner operates safely when ambient static pressure is 0.8~1.05 standard atmosphere pressure.

## CLEANING

△ Warning please shut down the unit and cut off the power before cleaning for safe.

### CLEAN THE FILTER

- Clean the unloaded filter with vacuum cleaner or water.
- Scrub with neutral detergent if the filter is too dirty. Do not wash with hot water (about above 50 °C), in case it is out of shape.
- Place it on a ventilated place and cannot be under the sunshine directly after washing lest it is out of shape.
- For your purchasing unit is a rear ventilated one, please remove the filter fixed screws (2screws) and take down the filter a way from the unit.
- For your purchasing unit is a descensional ventilate done, please push the filter up slightly to let the position retainer escape away from the flange fixed holes, and take off the filter according to the arrow direction shows in the

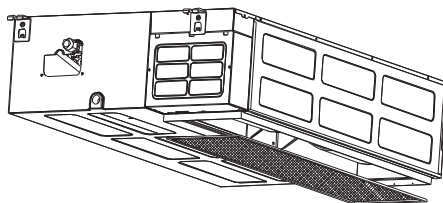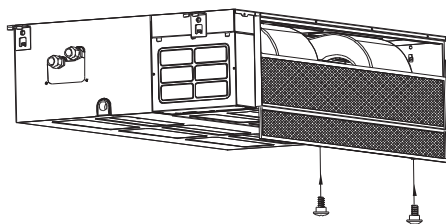

## MAINTENANCE

1. Please do the following job well if the air conditioner is not used for a long time.

In order to dry the unit completely, set the FAN mode and runs for 3-4 hours.

Shut down the air conditioner and cut off the power supply.

2. When used again after the unit stops for a long period:

When cleaning the filter and indoor unit, you must stop the unit and cut off power supply. Wipe the indoor unit with soft cloth. It is forbidden to polish the machine with petrol, benzene, lye, powder, detergent, insecticide etc., which will damage the unit.


Ensure air inlet and outlet of indoor and outdoor unit are not blocked by rubbish.

Check whether the grounded wire is loose and flexible, then connect the power.

## AFTER-SALES SERVICE


When your air conditioner cannot run in order, please shut down the machine and cut off the power supply immediately. Then contact dealers.

## IMPORTANT SAFETY INFORMATION

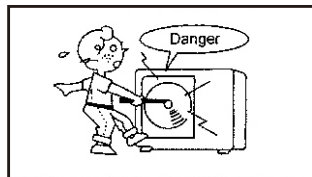

### ⚠CAUTION

Do not attempt to install this unit by yourself. This unit requires installation by qualified persons.

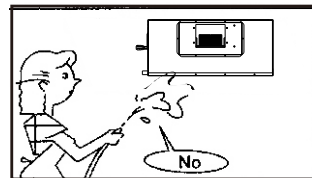


### ⚠DANGER

Do not attempt to service the unit yourself. This unit has no user serviceable components. Opening or removing the cover will expose you to dangerous voltage. Turning off the power supply will not prevent potential electric shock.

### ⚠DANGER

Never put hands or objects into the air outlet of indoor or outdoor units. These units are installed with a fan running at high speed. To touch the moving fan will cause serious injury.

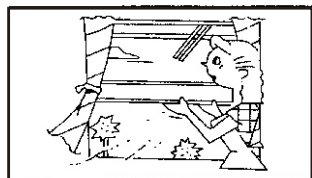


### ⚠DANGER

To avoid the risk of serious electrical shock. Never sprinkle or spill water or liquids on unit.


### ⚠WARNING

Ventilate the room regularly while the air conditioner is in use, especially if there is also a gas appliance in use in this room. Failure to follow these directions may result in a loss of oxygen in the room.

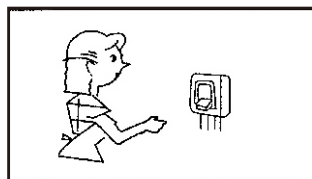

### ⚠WARNING

To prevent electric shock, turn off the power or disconnect the power supply plug before beginning any cleaning or other routine maintenance.

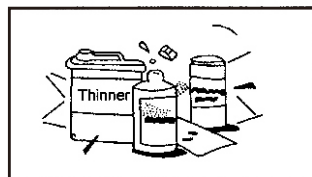


### ⚠WARNING

Do not use liquid cleaners or aerosol cleaners, use a soft and dry cloth for cleaning the unit. To avoid electric shock, never attempt to clean the units by sprinkling water.

### ⚠CAUTION

Do not use caustic household drain cleaners in the unit. Drain cleaners can quickly destroy the unit components (drain pan and heat exchanger coil etc).

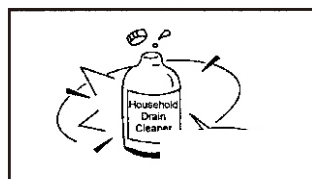


### NOTE

For proper performance, operate the unit in temperature and humidity ranges indicated in this owner's manual. If the unit is operated beyond these conditions, it may cause malfunctions of the unit or dew dripping from the unit.

# REMOTE CONTROLLER

No.	Button	Function
1	▲ (TEMP UP)	Increase the temperature or time by 1 unit
2	▼ (TEMP DN)	Decrease the temperature or time by 1 unit
3	ON/OFF	To switch the conditioner on and off.
4	ECO	In cooling mode, press this button, the temperature will increase 2 on the base of setting temperature In heating mode, press this button, the temperature will decrease 2 on the base of setting temperature
5	MODE	To select the mode of operation
6	SLEEP	To activate the function "SLEEP"
7	FAN	To select the fan speed of auto/low/mid/high
8	SWING	To activate or deactivate of the movement of the DEFLECTORS.
9	HEALTHY	To switch - on /off HEALTHY funtion.It is a button which controls the ionizer or plasma generator only for inverter type.
10	TURBO	In cooling mode, press this button, the unit will give the maximum cooling temperature with 16 In heating mode, press this button, the unit will give the maximum heating temperature with 31
11	DISPLAY	To switch on/off the LED display (if present)
12	TIMER	To set automatic switching-on/off

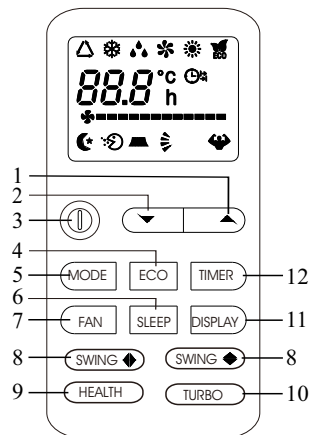


⚠ The outlooking and some function of remote control may vary according to the model.

⚠ The shape and position of buttons and indicators may vary according to the model, but their function is the same.

⚠ The unit confirms the correct reception of each press button with a beep.

## Remote control DISPLAY

### Meaning of symbols on the liquid crystal display

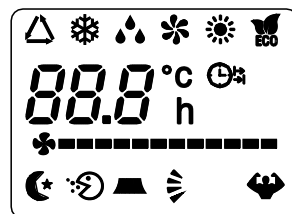

No.	Symbols	Meaning	No.	Symbols	Meaning
1	△	FEEL mode indicator	10	✱-----	MIDDLE FAN SPEED indicator
2	❄	COOLING indicator	11	✱-----	HIGH FAN SPEED indicator
3	💧	DEHUMIDIFYING indicator	12	🌙	SLEEP indicator
4	✱	FAN ONLY OPERATION indicator	13	🛡	SUPER indicator
5	☀	HEATING indicator	14	🕒	HEALTHY indicator
6	🕒*	TIMER OFF indicator	15	ECO	ECO indicator
7	🕒*	TIMER ON indicator	16	🔋	BATTERY indicator
8	✱-	AUTO FAN indicator	17	🔋	BATTERY indicator
9	✱---	LOW FAN SPEED indicator	18	88.8	CLOCK indicator




## COOLING MODE

The cooling function allows the air conditioner to cool the room and at the same time reduces the humidity in the air.

To activate the cooling function ( COOL ) , press the MODE button until the symbol ☀ appears on the display.

The cooling cycle is activated by setting the keys or  $\bar{E}$  at a temperature lower than that of the room.

To optimize the functioning of the conditioner, adjust the temperature ( 1 ) , the speed ( 2 ) and the direction of the air flow ( 3 ) by pressing the keys indicated

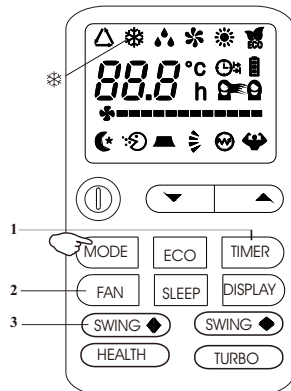

## HEATING MODE


The heating function allows the air conditioner to produce hot air.

To activate the heating function ( HEAT ) , press the

MODE button until the symbol ☀ appears on the display.

With the keys or  $\bar{E}$  set a temperature higher than that of the room..

To optimize the functioning of the conditioner adjust the temperature ( 1 ) , the speed ( 2 ) and the direction of the air flow ( 3 ) by pressing the keys indicated

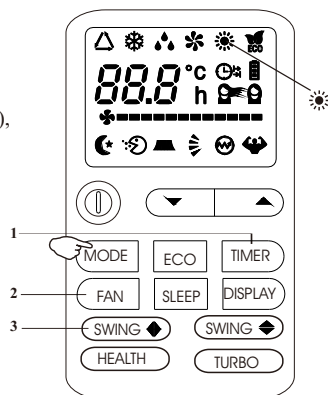

⚠ The appliance is fitted with a Hot Start function, which delays appliance to startup in a few seconds to ensure an immediate output of hot air.

⚠ In HEATING operation, the appliance can automatically activate a defrost cycle, which is essential to free the condenser from an excessive deposit of frost. This procedure usually lasts for 2-10 minutes during defrosting, fans stop operation. After defrosting, it returns to HEATING mode automatically.

## FAN MODE


The conditioner works in only ventilation.

To set the FAN mode, Press MODE until ☀ appears in the display.

With pressing FAN button the speed changes in the following sequence: LOW/ MEDIUM/HIGH /AUTO in FAN mode.

The remote control also stores the speed that was set in the previous mode of operation.

In FEEL mode (automatic) the air conditioner automatically chooses the fan speed and the mode of operation (COOLING or HEATING).

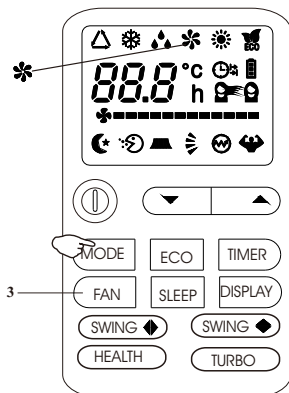

## TIMER MODE----TIMER ON


To set the automatic switching on of the air conditioner.  
To program the time start,the appliance should be off.  
Press **TIMER** ,Set the temperature with pressing the key  $\Delta$  or  $\nabla$ ,Press  
**TIMER** Again , set the time with pressing the key  $\Delta$  or  $\nabla$  , Press the key  
more times till on the display you can read the time which passes between the  
programming and the timed start.

### IMPORTANT!

Before proceeding with the timed start : program the working mode with  
the key **MODE**(2) and the fan speed with the key **FAN**(3) . Switch the  
conditioner off (with the key **ON/OFF** ).

Note:To cancel the setted function ,press the **TIMER** button again.

Note:In case of power off,it is necessary to set **TIMER ON** again.

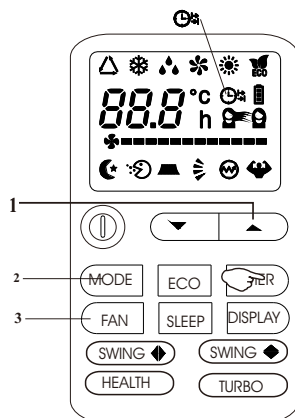


## TIMER MODE----TIMER OFF

To set the automatic switching-off of the air conditioner.  
The timed stop is programmed with the appliance on.  
Press **TIMER** ,Set the time pressing the key  $\Delta$  or  $\nabla$  , Press the key more times till  
on the display you can read the time which passes between the programming and the  
timed stop.

Note:To cancel the setted function, press the **TIMER** button again.

Note:In case of power off,it is necessary to set **TIMER OFF** again.


Note: While the time was right settled, the **TIMER** function of this  
remote(clock function) can set by half hours.

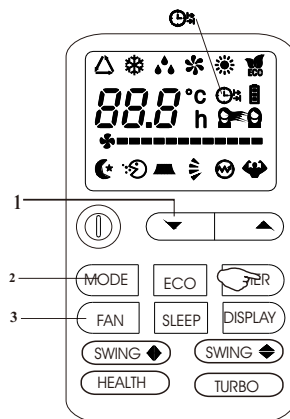

## DRY MODE

This function reduces the humidity of the air to make the room more  
comfortable.

To set the **DRY** mode ,Press **MODE** untill  $\Delta$  appears in the display . An  
automatic function of alternating cooling cycles and air fan is activated.

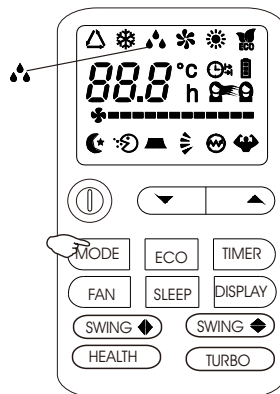


## FEEL MODE

To activate the FEEL (automatic) mode of operation, press the **MODE** button on the remote control until the symbol  $\Delta$  appears in the display.

In the FEEL mode the fan speed and the temperature are set automatically according to the room temperature (tested by the probe which is incorporated in the indoor unit) to ensure user comfort.

Ambient temp	Operation mode	Auto temp.
20	HEATING (FOR HEAT PUMP TYPE) FAN (FOR COOL ONLY TYPE)	23
20 ~26	DRY	18
26	COOL	23

To optimize the working of the conditioner, adjust the temperature (only 2) (1), the speed (2) and the direction of the air flow (3) by pressing the buttons indicated.

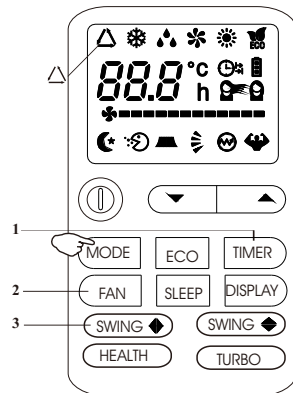


## SLEEP MODE

To activate the SLEEP mode of operation, press the **SLEEP** button on the remote control until the symbol  $\text{AUTOQUIET}$  appears in the display.

The function **SLEEP** automatically adjusts the temperature to make the room more comfortable during the night sleep. In cooling or dry mode, the set temperature will automatically raise by 1 every 60 minutes, to achieve a total rise of 2 during the first 2 hours of work.

In heating mode the set temperature is gradually decreased by 2 during the first 2 hours of work.

After 10 hours running in sleep mode the air conditioner is switched off automatically.

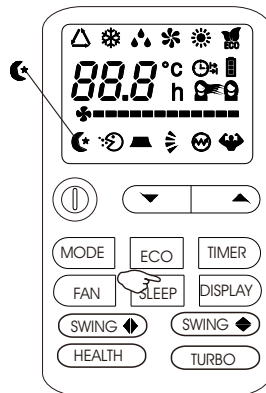


## ■ Remote controller handling procedure

### Batteries replacing procedure

Following cases signify dead cells. Replace the dead batteries with new ones.


- Receiving sound is not emitted from the unit when signal is transmitted.
- Indicator becomes indistinct.

**1** Please slide and remove the cover.

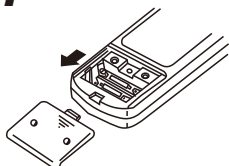

Slide the cover upwardly in the direction of the arrow.

**2** Exchange the batteries.

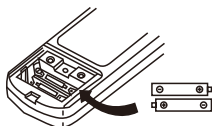

Attention to the (+) and (-) marks.

**3** Install the cover.

**4** Set it to the present time.

#### NOTE

- Do not use an old battery together with a new one.
- Remove cells when the remote controller is not used for a long period.
- The life of a cell made in conformity to JIS or IEC is 6 to 12 months in normal use. If it is used longer or an unspecified cell is used, a liquid leaks from the cell, causing the remote controller inoperative.
- Guideline of the life time is printed on the battery. The battery life may be shorter than that of the air conditioner depending on the date of manufacture.
- However, the battery may be alive even after the nominal life time expired.

### Note of remote controller handling

- A place with high temperature such as near an electric carpet or a stove.



- A place unprotected from direct sunlight or strong lighting.



- It will be damaged if fallen. Be careful.



- Do not put obstacles between the remote controller and the unit.



- Protect the remote controller from being splashed with water, etc.



 
- Do not put weights on the remote controller.



## ■ Air flow direction adjustment procedure

### Adjusting air flow direction

- Up/down direction can be adjusted by using the AIRFLOW button on the remote controller.  
This button, each time pressed, changes the mode in the following sequence:



- push the LOUVER button, changes the mode to swing louver.  
Push the button, to stop swing.

### NOTE


- When the room temperature controller(thermostat)trips in the heating mode or when the defrosting operation is conducted,the blow flap changes automatically to the horizontal position.
- When the heating operation has just started and the room temperature is still low,it may take a little time before the flap moves to the above sway operation angle.
- The flap may stop at the tilted down-blow position during the "Sway operation" in the heating mode,

## ■ About TIMER operation

### About Amenity reservation

Amenity reservation function is provided to start the operation a little earlier so that the room temperature is near the optimum temperature at the timer ON time in case of starting the operation by TIMER ON/OFF.

- Mechanism  
Checking of the room temperature starts 60 minutes ahead of the timer ON time. Depending on the temperature at that time, operation starts 5 to 60 minutes ahead of the timer ON time.
- Amenity reservation is the function only for COOL and HEAT operation mode (including AUTO). It does not actuate in DRY mode.

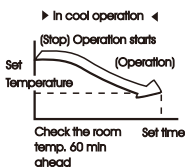

### About SLEEP Operation

When the SLEEP operation is selected, the room temperature is automatically controlled with elapsed time so that the room isn't too cool during cooling or too warm during heating.

- During cooling and dry: Present temperature is raised  $1^{\circ}$  in an hour (when the timer is set), and  $2^{\circ}$  raise in two hours. Then the temperature doesn't change ever.
- During heating: Present temperature is lowered  $1^{\circ}$  in an hour (when the timer is set), and  $2^{\circ}$  lower in two hours. Then the temperature doesn't change ever.

## ■ About FAN SPEED

- Capacity of the air conditioner can be selected by your choice. During heating or cooling.

Operation capacity by your choice	FAN SPEED
Set automatically by microcomputer	AUTO
Powerful operation with high capacity	HI
Standard operation	MED
Energy-saving operation	Lo

## ■ About power-off memory function

- When the air conditioner disconnect the power suddenly, restart it, the air conditioner operates at the mode it did before power suddenly failed.
- The wire control don't have this function

## TROUBLESHOOTING

The display content of indoor LED	The definition of failure or protection
E0	Indoor and outdoor Communication fault
E1	Indoor room temperature sensor fault
E2	Indoor pipe temperature sensor fault
E3	Outdoor pipe temperature sensor fault
E4	System unnormal
E5	Model allocation error
E6	Indoor fan motor fault
E7	Outdoor environment temperature sensor fault
E8	Exhaust temperature sensor fault
E9	Frequency conversion module fault
EA	Current sensor fault
EC	Outdoor Communication fault
EE	Outdoor EEPROM fault
EH	Outdoor suction temperature sensor fault
EF	Outdoor fan motor fault
EP	Compressor top temperature switch fault
EU	Voltage sensor fault
Ed	Indoor EEPROM fault
En	Outdoor gas pipe temperature sensor fault
Ey	Outdoor liquid pipe temperature sensor fault
PA	Indoor run mode conflict
P0	Module protection
P1	Voltage High/Low protection
P2	High current protection
P4	Outdoor protection
P5	High discharge temperature protection
P6	Exhaust low temperature protection when cooling
P7	Exhaust high temperature protection when heating
P8	Too high or too low protection for outdoor temperature
P9	Driver board protection